



Window/Wall Cling Installation

Turn over sign and peel liner back approximately 1 inch.

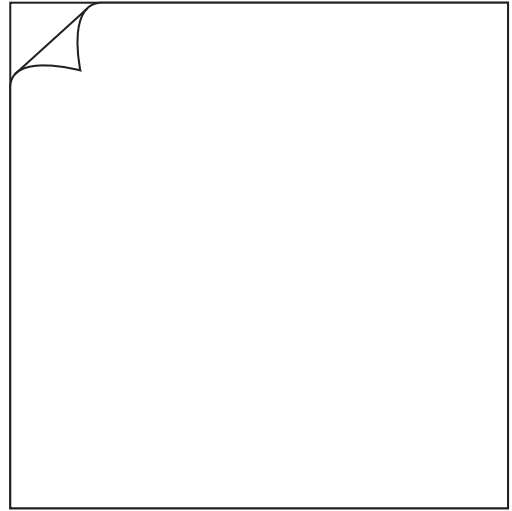

Crease the liner in preparation for application to surface.

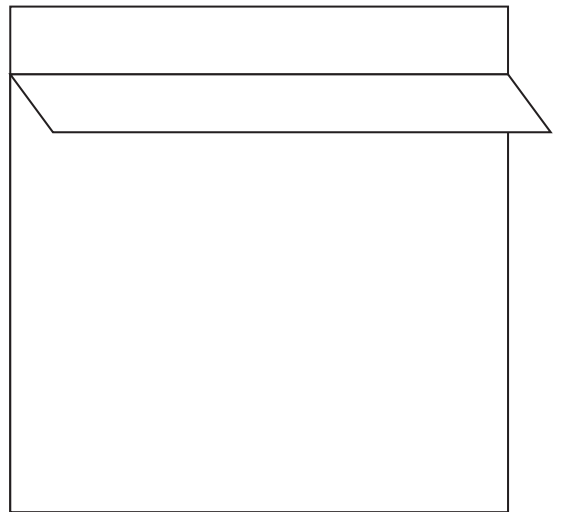

Carefully position sign on wall or window, placing exposed top adhesive area on to the surface.

Rub from the middle of the sign, using a squeegee to smooth the sign out to ensure there are no bubbles.

